


Pattern paper for the Strobe Mask Set

For Canon WP-DC33

(Canon IXY DIGITAL 220 IS)

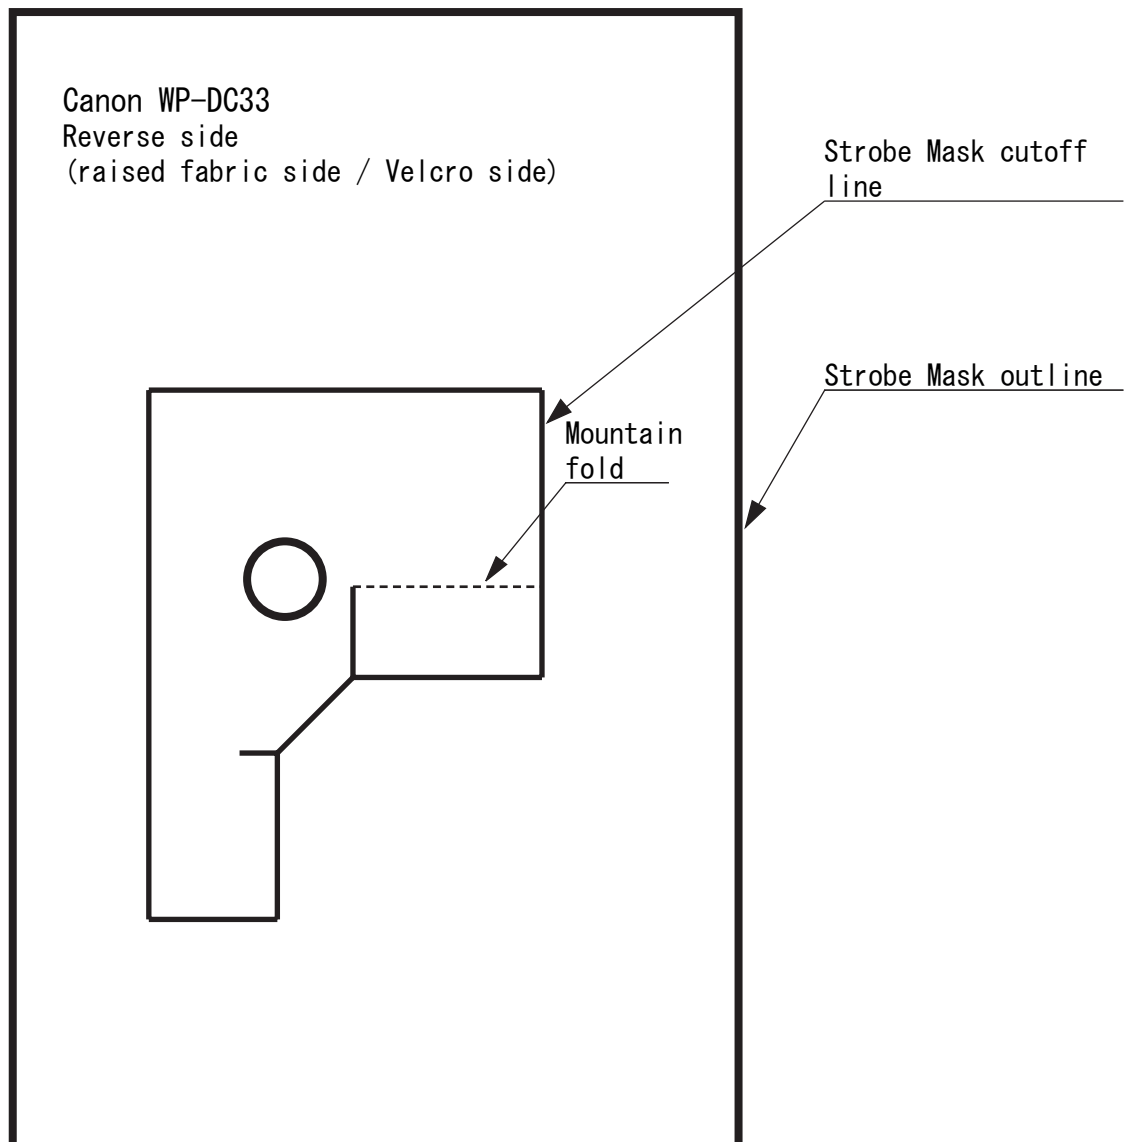

How to use the pattern paper

- ① Print this on A4 or letter sized paper at the same size without enlargement and/or reduction.
- ② Cut out the pattern paper in accordance with the strobe mask outline.
- ③ Place the cut-out pattern paper with printed side facing up on the strobe mask with raised fabric side facing up. The outlines and the holes of the strobe mask and the cut-out pattern paper must align.
 - * Fastening the strobe mask and the cut-out pattern paper at the four corners with tape will help with alignment.
- ④ Cut out the strobe mask in accordance with strobe mask cutoff line with the pattern paper.
- ⑤ Please refer to the instruction sheet of the strobe mask set to attach the strobe mask to your housing.