

List of strobe settings (camera's built-in flash)

**【Nikon】**

(As of Aug. 2023)

	Camera	Camera flash setting	Strobe mode dial	Pre-flash cancel setting	Optical input setting
DSLR	D7000	Forced luminescence	Manual1 / TTL	A(Factory setting)	Mode330
	D7100				
	D7200				
	D300S				
	D500				
	D600				
	D700				
	D800/D800E				
	D810				
Mirrorless	Nikon1 J1/J2	Forced luminescence	Manual1 / TTL	C	Mode330
	Nikon1 J4	Forced luminescence	Manual1 / TTL	D	Mode330
	Nikon1 J3				
	Nikon1 S1				

\*DS-TTL and DS-TTL II may not work properly with housings made by other manufacturers due to the position of the fiber-optic cable. Please check with the housing manufacturer in advance for compatibility.

**General settings and cautions for strobe photography**

- The camera's built-in flash should be set to the forced-flash mode. The red-eye reduction setting should be turned off.
- The DS-TTLII function cannot be used when the camera's built-in flash is set to manual flash (flash without pre-flash).
- When using a camera that uses the built-in flash for auxiliary light for AF, please turn off the DS-TTLII function.
- The ISO setting when checking compatibility is 100 or 200. If the ISO sensitivity is set to auto or higher, the flash output will be reduced and may not provide the correct brightness.
- If the light transmitted to the strobe is reduced due to deterioration of the fiber-optic cable or breakage of the core in the cable sheath, etc., the strobe may not dim, fire at full intensity, or not fire at all.
- We do not verify the firmware of all cameras. We select the models to be verified based on our standards. If you wish to update your camera, please contact us for further information.