

YS-01 SOLIS Customize Mode

Changing the camera's response to pre-flash in Customize mode will enable the strobe to fire on cameras that do not fire properly with the factory default settings.

(when using "⚡" or "DS-TTL" mode)


- For compatible camera models, please refer to the "Compatibility Chart for Other Manufacturers' Cameras" on our website (<http://www.seaandsea.jp>).

How to start Customize Mode

- 1 Set the mode switch to OFF.
- 2 Turn the light intensity adjustment dial to the "N" position.
- 3 While holding down the target light switch, turn the mode switch to "⚡".
- 4 Release the target light switch.
- 5 The ready light flashes green and the system enters the customize mode.

Pre-flash cancel mode setting

- 1 Turn the light intensity adjustment dial to the position of the mode you want to set.

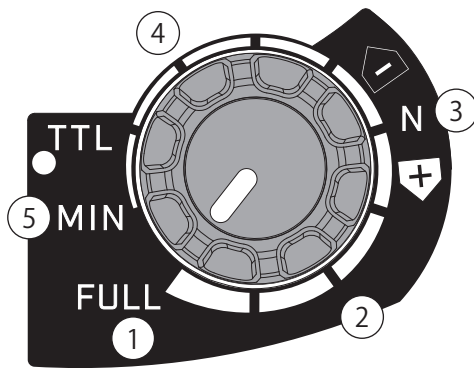

Position	Mode	Cancel time(msec)
1	A	10
2	B	140
3	C	100
4	D	50
5	E	22

- 2 Press the target light switch to determine the mode.
- 3 The ready light turns green for a few seconds and the setting is complete.