

50127 Flash Prism

Instruction Manual

Thank you for purchasing SEA&SEA products. Please read this instruction manual carefully prior to using this product. Only with a thorough understanding of this manual's content will you be able to use the product correctly. After reading the manual, please keep it in a safe place for future reference .

Precautions

Failure to heed the precautions listed below could result in serious consequences. To prevent injury or damage to yourself and/or others, please observe the precautions as they contain highly important information related to personal and product safety.




CAUTION

Situations that could result in property damage or personal injury.

CAUTION

- Unauthorized disassembling and/or modification could result in malfunction, and void product warranty. Take the product to a SEA&SEA authorized service center for repair or inspection.
- Do not expose to high temperatures such as inside a car/car trunk in summer. Excessive heat may deform plastic components and damage internal parts, resulting in malfunction.
- Please contact a SEA&SEA authorized service centre if the connector o-ring becomes damaged.
- Do not store the product in wet or humid conditions to avoid mold, rust, corrosion and malfunction.
- Rinse the product in fresh water, after using underwater. Dry the product after rinsing.
- Do not store the product with naphthalene or camphor mothballs or with other chemicals as this may cause mold, rust, corrosion and malfunction.
- The fiber optic cable transmits light from the camera's built in flash to the external strobe.
Make sure that both ends of the cable are free from contamination, including crystallized salt, dust, sand and silicone grease. Please clean if contamination is present.
- SEA&SEA SUNPAK Co., Ltd. will not be responsible for the replacement or compensation for cameras, lenses or those accessories damaged due to your invalid operation.
- SEA&SEA assumes no liability for compensation of loss of captured images or expenses caused by loss of images, even if you are unable to shoot due to a product defect or malfunction.


Identification of Parts

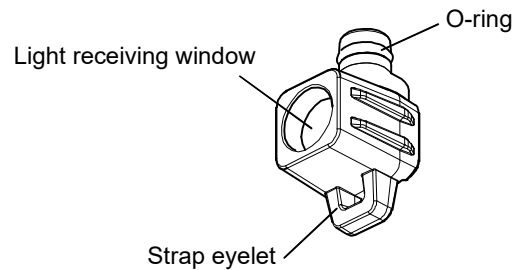

How to Use

- 1 Insert the flash prism into the fiber-optic cable socket (slave sensor) of the strobe until it stops

- The second fiber optic socket on the right may be used to fire an additional strobe.

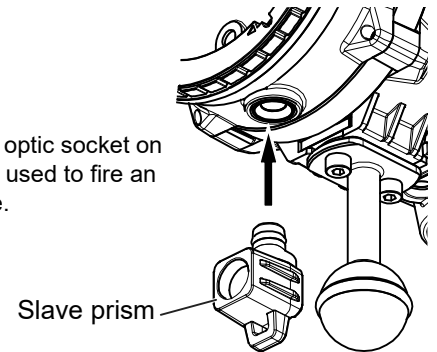

- 2 Set the mode switch to [⚡] .

- 3 Set the mode switch of the strobe connected to the camera to manual mode

- 4 Point the light receiving window of the flash prism to the light source of the strobe connected to the camera.

- When the connector is difficult to insert, apply a small amount of silicone grease to the O-ring. Use only designated SEA&SEA silicone grease in a tube with blue SEA&SEA logo and a blue cap.
- If the connector comes out too easily, wipe away excess grease from the o-ring with a soft cloth, etc.
- If the connector does not come out easily, slowly rotate whilst pulling gently. Do not pull too hard as this may cause damage.

Specifications

Construction	PC, ABS
Dimension	Approx. 14.5mm(W) x 28.5mm(H) x 16.5mm(D) Approx. 0.57 in(W) x 1.12 in(H) x 0.65 in(D)
Weight	Approx. 2.5g / 0.1oz
Accessories	Strap

* The specifications and appearance are subject to change without notice.