


Pattern paper for the Strobe Mask Set

For Canon WP-DC38

(Canon PowerShot S95)

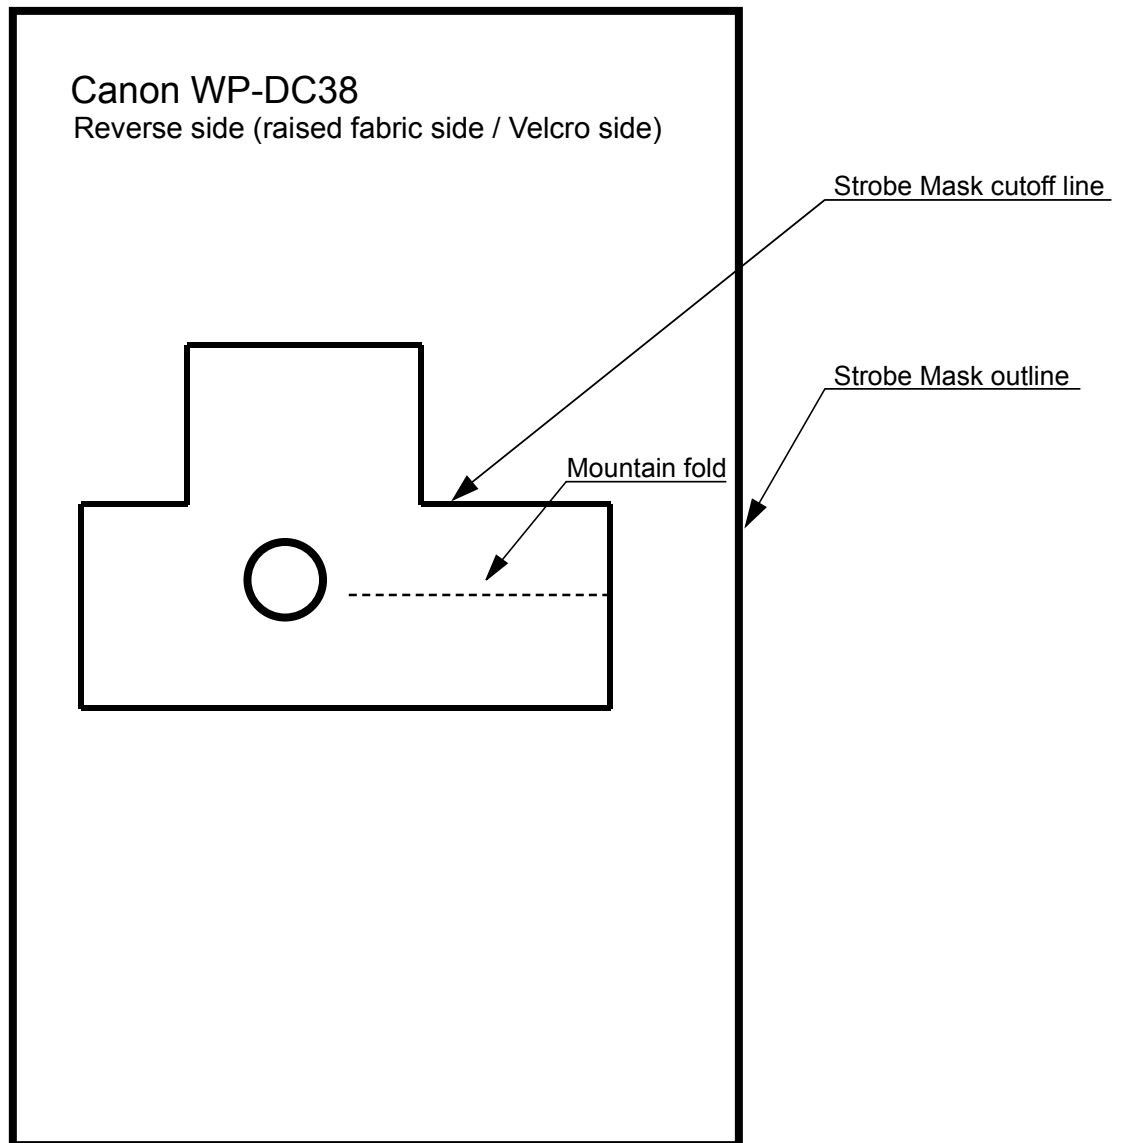

How to use the pattern paper

- 1) Print this on A4 or letter sized paper at the same size without enlargement and/or reduction.
- 2) Cut out the pattern paper in accordance with the strobe mask outline.
- 3) Place the cut-out pattern paper with **printed side facing up** on the strobe mask with **raised fabric side facing up**.

The outlines and the holes of the strobe mask and the cut-out pattern paper must align.

* Fastening the strobe mask and the cut-out pattern paper at the four corners with tape will help with alignment.

- 4) Cut out the strobe mask in accordance with strobe mask cutoff line with the pattern paper.
- 5) Please refer to the instruction sheet of the strobe mask set to attach the strobe mask to your housing.